

ADJUSTABLE E-VAC INSTALLATION & MAINTENANCE

SUCTION CUPS		VACUUM TUBING (O.D.)	VACUUM GENERATOR	
	SMALL ROUND MODEL DIAMETER THREADS 900752 1" 1/4 NPT 900753 1.5" 1/4 NPT 900754 2" 1/4 NPT 900755 2.5" 1/4 NPT 900756 3.5" 1/4 NPT	900795 (1/4") 900796 (3/8")	VACUUM GENERATOR CAN BE USED WITHOUT VACUUM CUPS. 	
	LARGE ROUND MODEL DIAMETER THREADS 900757 3.25" 3/8 NPT 900758 3.25" 1/4 NPT 900759 4.25" 3/8 NPT 900760 5" 3/8 NPT 900761 6" 1/2 NPT	VACUUM HOSE (I.D.) 900796 (1/4") 900689 (3/8") 900690 (1/2") 900063 (3/4") 900064 (1")	ATTACH ANY MODEL VACUUM CUP LISTED TO THE LEFT MODEL 9008 OR 9033 MODEL 9005 OR 9006 OR 9027 MODEL 9001 OR 9032	
	OPTIONAL MUFFLER 890001 1/4 NPS 890003 1/2 NPS	STRAIGHT THROUGH 890004 3/4 NPS 890005 1 NPS	FITTINGS (Male Global Thread fits either NPT or BSP)	
	OVAL MODEL SIZE THREADS 900762 .5" X 1" 1/8 NPT 900763 .5" X 2" 1/8 NPT 900764 .87" X 1.73" 1/8 NPT 900765 1.47" X 2.96" 1/8 NPT			
	BELLOWS MODEL DIAMETER THREADS 900766 .73" 1/4 NPT 900767 1" 1/8 NPT 900768 1.5" 1/4 NPT 900769 2" 1/4 NPT 900770 2.5" 1/4 NPT 900771 3.25" 3/8 NPT	PUSH-IN CONNECTORS for Hose 900969 1/4 MNPT x 1/4 hose barb 900970 1/4 MNPT x 3/8 hose barb 900971 1/4 MNPT x 1/2 hose barb 900972 1/2 MNPT x 1/4 hose barb 900973 1/2 MNPT x 3/8 hose barb 900974 1/2 MNPT x 1/2 hose barb 900975 1/2 MNPT x 3/4 hose barb 900976 3/4 MNPT x 3/8 hose barb 900977 3/4 MNPT x 1/2 hose barb 900978 3/4 MNPT x 3/4 hose barb 900979 3/4 MNPT x 1 hose barb 900980 1 MNPT x 3/4 hose barb 900981 1 MNPT x 1 hose barb	PUSH-IN SWIVEL TEE CONNECTORS 900781 1/4 Tube X 1/8 MGT 900782 1/4 Tube X 1/4 MGT 900783 1/4 Tube X 3/8 MGT 900784 3/8 Tube X 1/8 MGT 900785 3/8 Tube X 1/4 MGT 900786 3/8 Tube X 3/8 MGT 900787 3/8 Tube X 1/2 MGT	PUSH-IN BRANCH ELBOW CONNECTORS 900788 1/4 Tube X 1/8 MGT 900789 1/4 Tube X 1/4 MGT 900790 3/8 Tube X 1/4 MGT 900791 3/8 Tube X 3/8 MGT MGT = Male Global Thread
		MGT = Male Global Thread	MGT = Male Global Thread	PUSH-IN BULKHEAD CONNECTORS Female Union 900792 1/4 Tube X 1/4 Tube 900793 3/8 Tube X 3/8 Tube 900809 1/4 Tube X 1/4 NPT 900810 3/8 Tube X 1/4 NPT

COMPRESSED AIR LINE SIZES

For E-Vac Models 840008 – 840030, use 1/4" pipe or 3/8" hose for runs up to 25' (7.6m) long. For runs up to 50' (15.2m), use 3/8" pipe or 1/2" hose and for runs over 50' (15.2m), use 1/2" pipe or larger. For 840060 use 3/8" pipe or 1/2" hose for runs up to 25' (7.6m). For runs up to 50' (15.2m), use 1/2" pipe or larger. Do not use restrictive fittings or undersized lines that can "starve" the E-Vac by causing excessive line pressure drop.

COMPRESSED AIR SUPPLY


With proper filtration and separation of dirt, moisture and oil from the compressed air supply, the E-Vac will operate for years with no maintenance required. Use a 10 micron or smaller filter separator on the compressed air supply (Model 9032 Automatic Drain Filter Separator is used for Model 840060; Model 9001 is used for all other models.).

To prevent problems associated with oil, use an oil removal filter (Model 9005 Oil Removal Filter is used with the Model 840030 E-Vac; Model 9006 for the Model 840060 E-Vac; Model 9027 is used for all other models.). The oil removal filter should be used downstream from the automatic drain filter separator. Filters should be used close to each E-Vac, within 10 to 15' (3 to 4.6m) is best.

E-Vac is designed to use normal shop air supplies up to 80 PSIG (5.5 BAR). For infinite control of flow and vacuum, pressure may be regulated (Model 9033 Pressure Regulator is used for the Model 840060 E-Vac; Model 9008 for all other models.).

HOW IT WORKS

Compressed air flows through the inlet (1), then through an adjustable annular nozzle (2). As the airstream enters the vacuum flow, it expands and increases in velocity (3). A vacuum flow is induced, creating suction (4). The airflow that is drawn through the vacuum inlet mixes with the primary airstream, then exhausts on the opposite end (5).

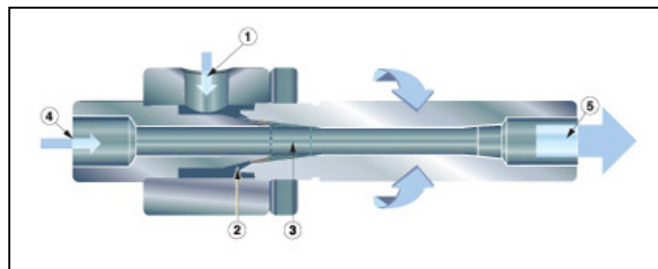

The amount of vacuum flow can be adjusted. When facing the exhaust end, loosen the lock ring (turn counterclockwise), then turn the exhaust. To increase flow, turn the exhaust counterclockwise. To decrease flow, turn the exhaust clockwise. Be careful not to unthread the exhaust completely. There will be a point where no more vacuum flow can be achieved.

The amount of vacuum created varies with the porosity of the load being picked up. Units come from the factory set to 15" Hg if used on a solid, non-porous surface. A maximum of 25" Hg can be achieved on a solid, non-porous surface, but will require increasing the air consumption and vacuum flow.

Model	Air Inlet	Vacuum Inlet	Exhaust Port
840008	1/8 NPT	1/4 NPT	1/4 NPT
840008M	1/8 NPT	1/4 NPT	1/4 NPS
840015	3/8 NPT	1/2 NPT	1/2 NPT
840015M	3/8 NPT	1/2 NPT	1/2 NPS
840030	3/8 NPT	1/2 NPT	3/4 NPT
840030M	3/8 NPT	1/2 NPT	3/4 NPS
840060	1/2 NPT	3/4 NPT	1 NPT
840060M	1/2 NPT	3/4 NPT	1 NPS

E-Vac Models (Silencing Mufflers may installed to reduce noise levels.)	Straight-Through Muffler
840008	890001
840015	890003
840030	890004
840060	890005

FITTINGS AND TUBING

The vacuum port of the E-Vac has an NPT thread (a vacuum cup can be threaded directly into it). For vacuum cups that are remotely located, push-in connector fittings or hose barbs (most have global threads for use with NPT and BSP) can be installed on the E-Vac and the vacuum cup. Vacuum tubing is available (10', 20', 30', 40' and 50' lengths) to connect them. For best performance, the length of the tubing should be minimized to achieve the best attach and release times.

CHECK VALVE


A vacuum check valve is available to hold the vacuum in case of compressed air loss. It is designed for high flow so it doesn't restrict airflow or slow the vacuum operation. Maximum vacuum can still be achieved without affecting the performance. E-Vac vacuum generators that are used without a check valve will release the load if there is a significant drop in compressed air pressure or the supply of compressed air is lost.

TROUBLESHOOTING & MAINTENANCE

If There Is A Reduction In Flow Or Vacuum From The E-Vac, check the pressure by installing a gauge at the compressed air inlet of the E-Vac. Large pressure drops are possible due to undersized lines, restrictive fittings and clogged filter elements.

For replacement or repair filter and regulator parts, contact EXAIR at 1-800-903-9247 or techhelp@exair.com. Call (513) 671-3322 for outside the US and Canada.

Adjustable E-Vac Dimensions

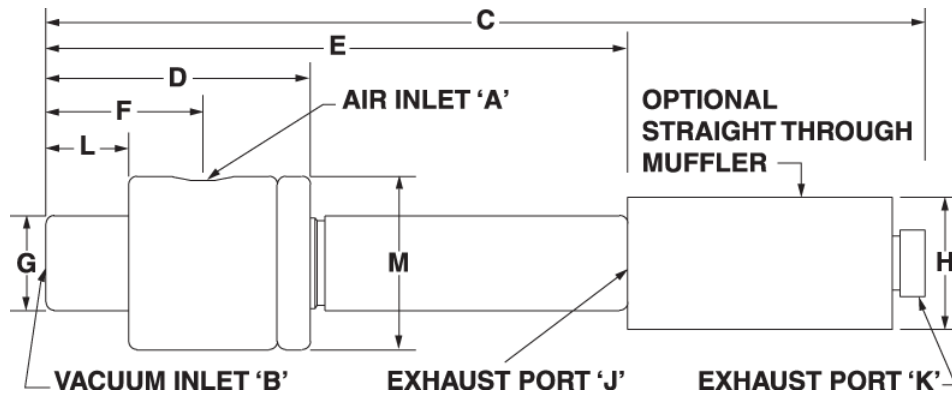

Adjustable Vacuum Generator Dimensions

Model	Air Inlet A	Vacuum Inlet B		C	D	E	F	G	H	L	M	Exhaust Port J	Exhaust Port K
840008	1/8 NPT	1/4 NPT	in	N/A	2.00	4.38	1.19	0.72	N/A	0.63	1.31	1/4 NPT	N/A
			mm	N/A	51	111	30	18	N/A	16	33		
840008M	1/8 NPT	1/4 NPT	in	6.63	2.00	4.38	1.19	0.72	0.75	0.63	1.31	1/4 NPT	1/4 NPS
			mm	168	51	111	30	18	19	16	33		
840015	3/8 NPT	1/2 NPT	in	N/A	2.38	5.44	1.31	.97	N/A	0.63	1.56	1/2 NPT	N/A
			mm	N/A	60	138	33	25	N/A	16	40		
840015M	3/8 NPT	1/2 NPT	in	9.69	2.38	5.44	1.31	.97	1.25	0.63	1.56	1/2 NPT	1/2 NPS
			mm	246	60	138	33	25	32	16	40		
840030	3/8 NPT	1/2 NPT	in	N/A	2.50	6.19	1.44	1.22	N/A	0.75	1.94	3/4 NPT	N/A
			mm	N/A	64	157	37	31	N/A	19	49		
840030M	3/8 NPT	1/2 NPT	in	13.63	2.50	6.19	1.44	1.22	2.00	0.75	1.94	3/4 NPT	3/4 NPS
			mm	346	64	157	37	31	51	19	49		
840060	1/2 NPT	3/4 NPT	in	N/A	2.75	6.50	1.56	1.47	N/A	0.75	2.19	1 NPT	N/A
			mm	N/A	70	165	40	37	N/A	19	56		
840060M	1/2 NPT	3/4 NPT	in	13.94	2.75	6.50	1.56	1.47	2.00	0.75	2.19	1 NPT	1 NPS
			mm	354	70	165	40	37	51	19	56		

CLEANING

If contaminants have clogged the E-Vac, inspect it for dirt contamination and a possible oil film inside the unit. Clean it with a mild detergent and reassemble. Occasionally, there is a build-up which occurs in the unit that is a result of vapors in the atmosphere that have been pulled through the E-Vac. Clean all surfaces with a solvent and a clean rag.

If you have any questions or problems, please contact:

Henderson Indústria e Comércio Ltda
 Av. Álvaro Guimarães 1455 Planalto - CEP: 09890-003
 São Bernardo do Campo São Paulo Brazil
 Tel: (11) 4399.2992 ▪ Fax: (11) 4341.5535
 E-mail: Henderson@henderson.com.br